

Villa Le Quattro Pietre

Appliance Instructions – Holiday Home

Washing Machine BEKO WUX71236AI-IT

- 1 Open the door and load the laundry (max 7 kg).
- 2 Add detergent into the drawer according to the selected program.
- 3 Select the 'Eco 40-60' program for efficient washing.
- 4 Press the start button ■■ and wait until the end of the cycle (about 3.5 hours).
- 5 When finished, open the door and let the drum dry.

Dishwasher INDESIT D2I HKL326

- 1 Load dishes, glasses, and cutlery neatly.
- 2 Place the tablet in the detergent compartment and close the door.
- 3 Select the 'Eco' or 'Rapid 30 min' program using the front buttons.
- 4 Press the start button ■■.
- 5 After the cycle, wait a few minutes before opening to avoid hot steam.

Extractor Hood SILVERLINE SOHO DROP CONTROL

- 1 Turn on the hood with the 'Power' button.
- 2 Adjust suction speed (1, 2, or 3) depending on smoke intensity.
- 3 Activate the light with the ■ symbol if necessary.
- 4 Turn off the hood after cooking to save energy.

Oven INDESIT IFW 6530 IX

- 1 Turn the function knob to select the program (static, fan, grill).
- 2 Set the temperature with the second knob.
- 3 Press the start button ■■ or wait for the heating indicator to turn off.
- 4 After cooking, turn the knobs to '0' and let it cool with the door slightly open.

Refrigerator HOTPOINT ARISTON HA70BE 72 X

- 1 Set the temperature from the internal panel (fridge 4°C / freezer -18°C recommended).
- 2 Do not place hot food directly inside.
- 3 Defrost the freezer periodically if ice forms.
- 4 Keep the seals clean to avoid energy waste.

Induction Hob ELECTROLUX CIT81443

- 1 Place a suitable pot (magnetic base).
- 2 Turn on with the 'Power' button.
- 3 Select the cooking zone and adjust power (1–9).
- 4 To turn off, hold the 'Power' button for 2 seconds.

Kettle GIRMI BL30

- 1 Fill the kettle with water (up to the MAX level).
- 2 Place it on the base and switch it on.
- 3 The appliance turns off automatically once boiling is reached.

TV LG 32LQ631COZA

- 1 Turn on the TV with the remote control (red button).
- 2 Use the 'Input' buttons to select HDMI or Digital TV.
- 3 Adjust volume and channels with the ▲▼ buttons.
- 4 For streaming, go to the 'Smart TV' menu □ desired app (Netflix, YouTube, etc.).

TV LG 55UR78006LK

- 1 Turn on with the remote control.
- 2 Select the source (HDMI or Digital TV).
- 3 Go to the 'Home' menu for Smart TV and streaming apps.
- 4 Use the 'Settings' button ■■ to adjust language or Wi-Fi.

Air Conditioner HAIER AS35PBPHRA-PRE / 1U35MEPFRA-PRE

- 1 Turn on with the remote control.
- 2 Select the mode: ☼■ Cool / ■ Heat / ■ Fan / ■ Dehumidification.
- 3 Adjust the temperature using ▲▼ buttons.
- 4 Use the 'Swing' function to adjust fin direction.
- 5 Turn off after use to save energy.

Iron ROWENTA DX16XX

- 1 Fill the water tank (do not exceed the MAX level).
- 2 Set temperature according to fabric type.
- 3 Wait until the light goes off: the iron is ready.
- 4 Press the steam button if needed and iron on a flat surface.
- 5 Always empty the tank after use.